

 
# nuGo! ONE Bluetooth Speaker

## QUICK START GUIDE



### 1 Charging

Please make sure before putting into operation that the battery of the nuGo! ONE is charged enough. The battery charge level is shown in the display when the device is in operation. If the battery level is low, it must be charged as follows:

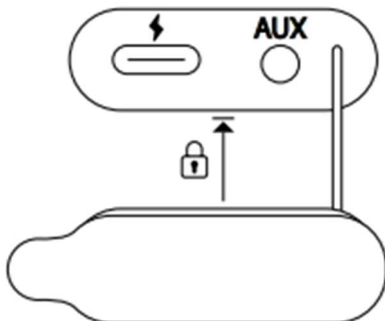


On the back side there is a plastic cover with some technical connections behind. Connect the USB-C jack on the left with the included power supply unit.

#### **⚠ Notice:**

 
- To ensure splash water protection of the device, the plastic cover must be closed tightly after it has been recharged.

## 2 Switching on and off

By pressing the  button the loudspeaker can be activated or turned off. Press this button for 1 second as minimum for turning off the nuGo! ONE.


## 3 Main Menu

Press and hold the rotary control for 3 seconds to switch into menu while the operating display works permanently. Navigate by rotating the knob. Press the knob to select a menu point.

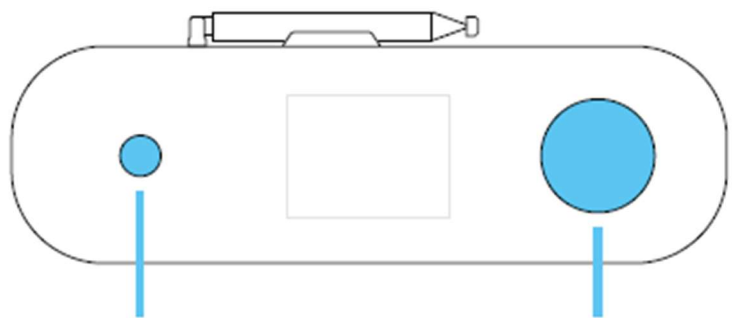

**Back 1x**

 
**Menu 3 sec.**

By pressing the  button you came back to previous settings.

**Select Rotate**  
**Confirm Press 1x**

## 4 Choosing source

Press and hold the rotary control for 3 seconds to switch into menu while the operating display works permanently. Navigate by rotating the knob. Press the knob to select a menu point.

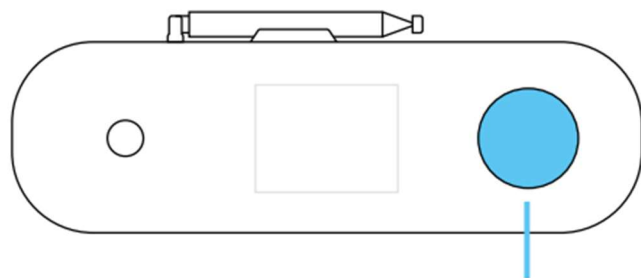

**Menu 3 sec.**  
**Select Rotate**  
**Confirm Press 1x**

Choose with the rotary control your desired source:

- AUX

- Bluetooth
- DAB+ radio
- FM/UKW radio

Confirm your choice by pressing the rotary control shortly.

## 5 Radio mode

By rotating the rotary control knob, you could set the volume level. To choose a radio station, press on the rotary control shortly and select...

- in FM mode the appropriate frequency or
- in DAB mode the radio station you want. (By an initial start-up or a new installation location, make a station scan firstly.)

To save the currently radio station, press the rotary control once.

- In FM mode, the station is marked in **orange**.
- In DAB mode, change to sender list and mark the station you want in **orange**.

Press the rotary control for 3 seconds and the radio station will be saved in the sender list.

If you press the rotary control twice, you will change to the list with the saved favourite stations.

## 6 Bluetooth mode

By rotating the rotary control knob, you could set the volume level.

When pairing with another device firstly, the nuGo! ONE is looking for a suitable device automatically.

For pairing another device, press the rotary control knob two times successively. The nuGo! ONE will uncouple the first connection and searches for new devices then.

**Tip:** For best sound quality, we recommend adjusting the source device at maximum volume and regulate the volume level with the nuGo! ONE directly.

## Service

If you may have any questions about your new Nubert product or some problems with putting into operation, you could gladly contact our Service Team. Please hold ready your customer number.

---

Technical changes and misprints reserved. You will find the newest instructions for use and more information about this product here: <http://www.nubert.de/>  
Our General Terms and Conditions (GTC/AGB) can be found on our website:  
[www.nubert.de/agb.htm](http://www.nubert.de/agb.htm)



Nubert electronic GmbH  
Nubertstraße 1  
73529 Schwäbisch Gmünd  
Germany

E-Mail: [info@nubert.de](mailto:info@nubert.de)  
Hotline: +49(0)7171 8712-0  
[www.nubert.de](http://www.nubert.de)  
© Nubert 05/23