

Nubert XRC Android Interface

Safety Instructions
Technical Data
Operating manual
Warranty Terms

nubert[®]

Device approval and conformity with EC directives

Nubert electronic GmbH hereby declares that this product complies with with all legal requirements, provided that it is installed and used in accordance with the manufacturer's instructions. Do not change the serial number of the device. It is part of the operating approval. If the device is repaired or modified by workshops or other third parties not authorized by Nubert, it loses its operating license. Only accessories and devices may be connected which in turn comply with all legal requirements and are approved. The device may only be used for the applications specified in the „Intended Use“ section.

Intended use

This device is exclusively intended for connection to mobile devices (here: smartphones or tablets with Android operating system) and exclusively for sound recording in connection with the appropriate Nubert app in dry rooms. Use the device only as described in this manual. Any other use (particularly safety-relevant or medical use, installation in open environment like IP-certified products) is considered improper and may result in property damage or even personal injury. Nubert electronic GmbH does not assume any liability for damages caused by improper use

Safety instructions

The entire operating manual, in particular the safety instructions, must be read in full before connecting and commissioning the device. For your own safety, be sure to follow all warnings and safety instructions in this manual and on the device. The user is not permitted to carry out any work on the device other than the described work. Keep this document so that you have access to it at all times. Furthermore, it must also be handed over to possible re-owners.

Key to the symbols

The triangle symbol with exclamation mark (without additional comment) indicates important instructions for commissioning, operation and maintenance of the device.



The term **Caution!** next to the triangle symbol indicates a medium risk. Failure to observe this warning may result in property damage.

The term **Danger!** next to the triangle symbol indicates a high risk. Failure to observe this warning may result in death or personal injury.



Equipment marked with this symbol must not be disposed of with household waste. Refer to the Disposal section at the end of this manual.

General information



Danger of suffocation!

Never let children use the device or play with the packaging unattended. Small parts could be swallowed and lead to suffocation. In case of swallowing any parts, contact a doctor immediately!



Danger of injury or damage!

When moving the device, do so with the necessary care to avoid injury and damage!



Caution!

The device can only be switched off completely by disconnecting it from the power supply. Therefore, it must be positioned so that you have free access to the USB connector. If any of the following situations occurs, the device must be disconnected from the power supply immediately. Contact Nubert electronic GmbH (info@nubert.de) immediately!

- The device has been damaged or has fallen down.
- Plug or cord is damaged
- Objects or liquid have got into the device
- The device has been exposed to excessive moisture or rain.
- The device does not work properly or exhibits a significant reduction in performance.
- The device smells burnt, develops smoke or makes unusual noises. Only use accessories recommended by Nubert!

Handling



Caution!

Improper handling can damage the device itself and its USB plug as well as the USB socket of your mobile device!

- Be careful not to bend the device!
- Do not press on the side of the device while it is plugged in (in the mobile device)!
- Keep strong mechanical shocks away from the device!



Caution!

Excessive heat build-up inside the unit can shorten its service life or lead to fire.

- Do not operate the device near heat sources such as radiators or stoves!
- Do not expose to direct sunlight!
- Never place burning candles or similar open fire sources near the device!



Caution!

The device has no special protection against the intrusion of liquids or objects into the system.

- No objects or foreign bodies may get into the device.
- Never touch the device with wet hands!
- Only use the device in a dry place!
- The device must be protected from liquids of all kinds, including dripping and splashing water.
- If the device is moved from a cold environment to a warm room, condensation may form inside the unit. Wait at least six hours until the device has reached room temperature and is dry before switching it on!
- Do not use the device during rapid temperature changes!
- Should the device come into contact with liquids or should objects have gotten inside, please disconnect it immediately and contact Nubert electronic GmbH (info@nubert.de)!

Connection Instructions



General Connection Instructions

- Only plug the USB plug of the device into USB sockets of designated mobile devices!
Make sure that the supply voltage is 5 V DC! The device must not be connected to other power supplies.
- If the device is not used, or is unsupervised, for a longer period of time, disconnect the power supply by unplugging it from the mobile device!
- Only use cables and accessories recommended by Nubert!

Care and cleaning tips



Caution!

- Improper handling of the device may result in damage.
- Always unplug the device from the mobile device before cleaning it!
- Never use strong cleaning agents or solvents such as petrol, spirit or similar!
- Before recommissioning, make sure that all connections are correct, that there are no short circuits and that all devices are completely dry.

This adapter is available to
purchase for £15 including UK delivery
Please contact info@blueaura.co.uk

Technical Data Nubert XRC Android Interface

Interface for acoustic measurements with the Nubert X-Remote App

Connections	1x USB-C for power supply and data transmission
Voltage supply	5 V DC
Power consumption	175 mW
Dimensions	2.9 x 3.0 x 0.9 cm
Weight	5 g

Unpacking and Scope of Delivery

Unpacking

To avoid possible damage of the device, do not use sharp or pointed objects when unpacking it. Please keep the packaging in a safe place in case you need to transport the device at a later date.

Scope of Delivery

If the delivery is complete, it contains the following parts:

1 XRC Android Interface

Warranty Terms

Nubert warrants the Nubert product described in this manual to the purchaser under the following terms and conditions. The purchaser's statutory warranty claims, in particular for subsequent performance and, if applicable, damages in the event of defects, shall remain unrestrictedly with the purchaser and shall be fully available to our customers.

1. The warranty period

for the Nubert product and its electronic components described in this manual is **2 years from the date of delivery**. Your proof of purchase is the proof of guarantee.

2. Contents of the warranty claim

The warranty applies to all parts and labour costs from delivery. It includes and is limited to the free repair or replacement of the defective part in the event of a material defect in the goods (e.g. Material defect or manufacturing defect). In addition, Nubert shall bear the costs of the return shipment of the affected product from or to the curb in the case of justified warranty claims, provided that the goods are within the countries of the European Union and the shipment was previously agreed with Nubert. Additional services are possible as a gesture of goodwill in accordance with Nubert's free discretion. For the duration of the guarantee, it is assumed that the material defect was already present at the time of transfer of risk. Replaced parts become the property of Nubert. Warranty services do not extend the warranty period, nor do they set a new warranty period in motion. The warranty period for installed spare parts ends with the warranty period for the entire device. The promise or the execution of warranty services is made without recognition of a performance obligation according to statutory warranty law.

3. The warranty claim does not apply in the case of

- repair attempts of any kind not previously agreed upon with Nubert
- improper operating environment or improper storage (e.g. damage due to moisture or particularly high or low temperatures)
- improper transport packaging (the original transport packaging, correctly used, provides sufficient protection)
- improper transport, if the transport was not previously agreed upon with Nubert (Nubert organizes the transport for you with Nubert selected Transport company. You will receive return tickets with the corresponding postage paid returns).
- improper mechanical effects on the goods
- improper operation, improper mounting.

4. Disassembled components

Do not open the Device! Do not disassemble any components from our equipment and do not send in any such individual parts until you have contacted Nubert Service and agreed on this measure.

5. What to do in the event of a warranty claim

- If possible, pack the defective device in its original carton with a copy of the purchase receipt and a meaningful description of the defect. Please note our shipping instructions. Please contact the Nubert team for a return or refund:
 - Phone: +49 7171 8712-0
 - Fax: +49 7171 8712-345
 - E-mail: info@nubert.de
- Of course, you can also return your defective product to the Nubert Service in Schwäbisch Gmünd or Aalen:
- Nubert electronic GmbH, Goethestr. 69, D-73525 Schwäbisch Gmünd
 - Nubert electronic GmbH, Bahnhofstr. 111, D-73430 Aalen.

Shipping information: We recommend that you always keep the original carton, along with the protective foam inserts. Tip: Folding saves space! This is the only way to ensure a safe return shipment in the worst-case scenario. If, in exceptional cases, you use a different packaging, it should protect professionally against the typical dangers of shipping and have special protective cushions or equivalent protective devices. We would like to draw your attention to the fact that we accept no liability for damage caused by improper packaging for which you are responsible!

Disposal

Environmental protection: Ingredients, e.g. chemical pollutants in old appliances, can damage the environment and health if stored improperly, in particular if they are not shatterproof or disposed of properly by persons not authorized to do so. Especially in the case of illegal exports, there is no guarantee that the environment and human health will be protected from damage. Old appliances can also contain recyclable raw materials, old appliances can be repaired or parts can be reused and thus considerably protect the environment. Old appliances must therefore not be disposed of with normal household waste or exported illegally. As an end user, you are legally obliged to return or properly dispose of electrical equipment.

Old appliances: Electrical and electronic equipment is also marked with the crossed-out wheeled bin symbol.



The symbol indicates that you, as the owner of this appliance, may not dispose of it with your household waste (grey bin, yellow bin, organic waste bin, paper or glass). You can send the device to the municipal collection points to be collected separately from unsorted municipal waste for reuse. Used batteries and accumulators which are not enclosed by the waste equipment shall be separated from it at a collection point prior to delivery. Old appliances can also be returned to us directly in our shops or shipped back to us for disposal. Please send an Email to info@nubert.de for a free return shipping label. You can also request this by calling +49 7171-8712-0. Please then send the old address to the following address:

Nubert electronic GmbH,
Goethestr. 69, 73525 Schwäbisch Gmünd, Germany
Please ensure that the old appliance is properly packaged for shipment so that breakage is avoided as far as possible and mechanical compaction or breakage can be ruled out. The acceptance of waste equipment may be refused if there is a risk to human health and safety due to contamination.

Your provider and contractual partner

Nubert electronic GmbH
Goethestr. 69 · 73525 Schwäbisch Gmünd · Germany
Managing Directors: Günther Nubert, Bernd Jung
Registergericht AG Ulm, HRB 700296
Phone: +49 (0)7171 8712-0 · Fax: +49 (0)7171 8712-345
E-Mail: info@nubert.de
Ust-IdNr.: DE 16758584 · WEEE-Reg.-Nr. DE 48888173

Warranty Terms as of: 12.08.2020

Technical changes, errors and misprints excepted.
You will find our General Terms and Conditions (AGB) on our website:
www.nubert.de/agb.htm